

SPEC.-OPS[®] BRAND

Guaranteed for life.





IMPROVED DESIGN

Instructions for AMBIDEXTROUS "UNIVERSAL" MAMBA Sling

ASSEMBLY PARTS LIST


Fixed Buttstock Strap
(Not used in M4 Assembly)

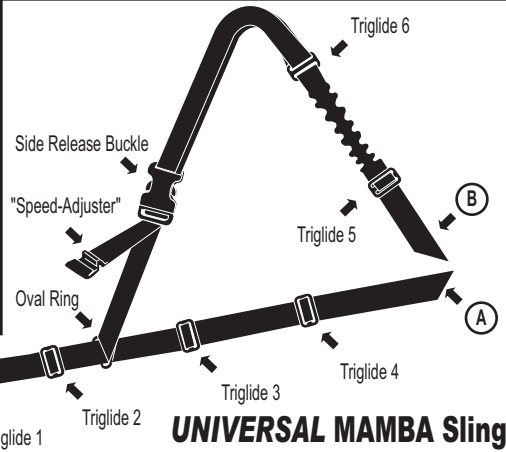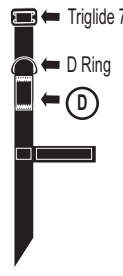


M-16 Assembly

FOLLOW STEPS 1 THROUGH 9 FOR THE ASSEMBLY OF THE UNIVERSAL MAMBA SLING. USE THE ASSEMBLY PARTS LIST FOR REFERENCE.


1 Insert and loop the shorter piece of webbing of the *Fixed Buttstock Strap* through the sling swivel and secure it using the hook & loop

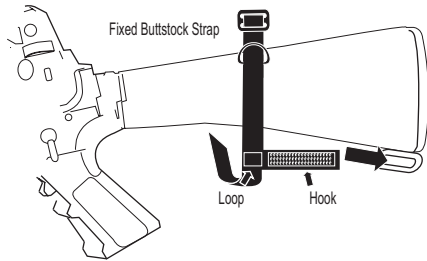


2 Insert and "Back Loop" the loose end of the *Fixed Buttstock Strap* through *Triglides 7*

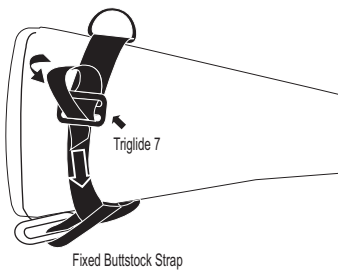


3 Insert **A** through **D** and *Triglides 4*

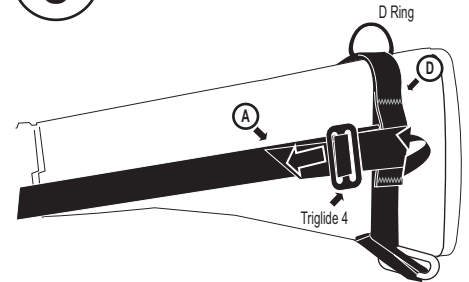


4 "Back Loop" **A** through *Triglides 4*

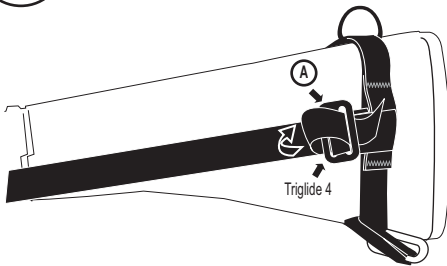


5 Insert **B** through the "D" Ring and *Triglides 5*

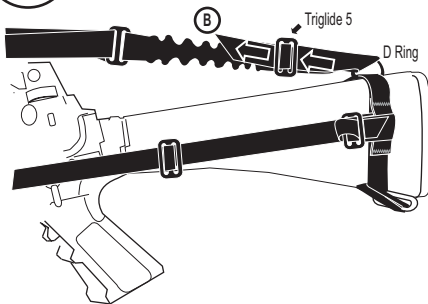


6 "Back Loop" **B** through *Triglides 5*

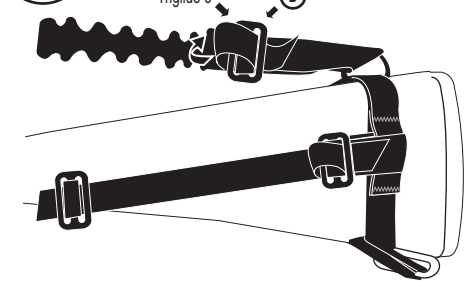

7 Place your fist between the sling and the rifle, as shown, and insert **C** through the *M-16 Front Sling Swivel*. This keeps the side strap from being too tight against weapon.

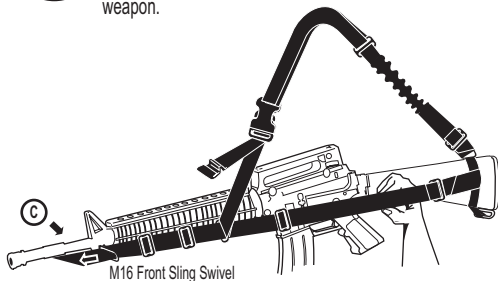

8 Fold back and insert **C** through *Triglides 1*

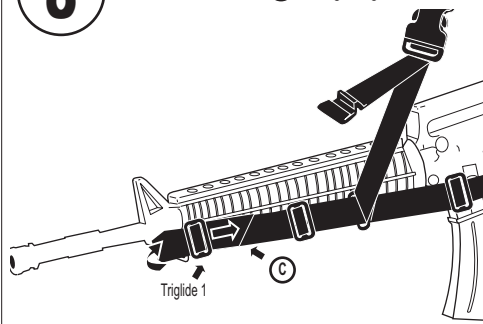

9 "Back Loop" **C** through *Triglides 1*. Now you are all set to use your *UNIVERSAL MAMBA Sling* on your fixed buttstock rifle!

